


ПЕЧЬ ДЛЯ ПИЦЦЫ TATRA TPO 44 M

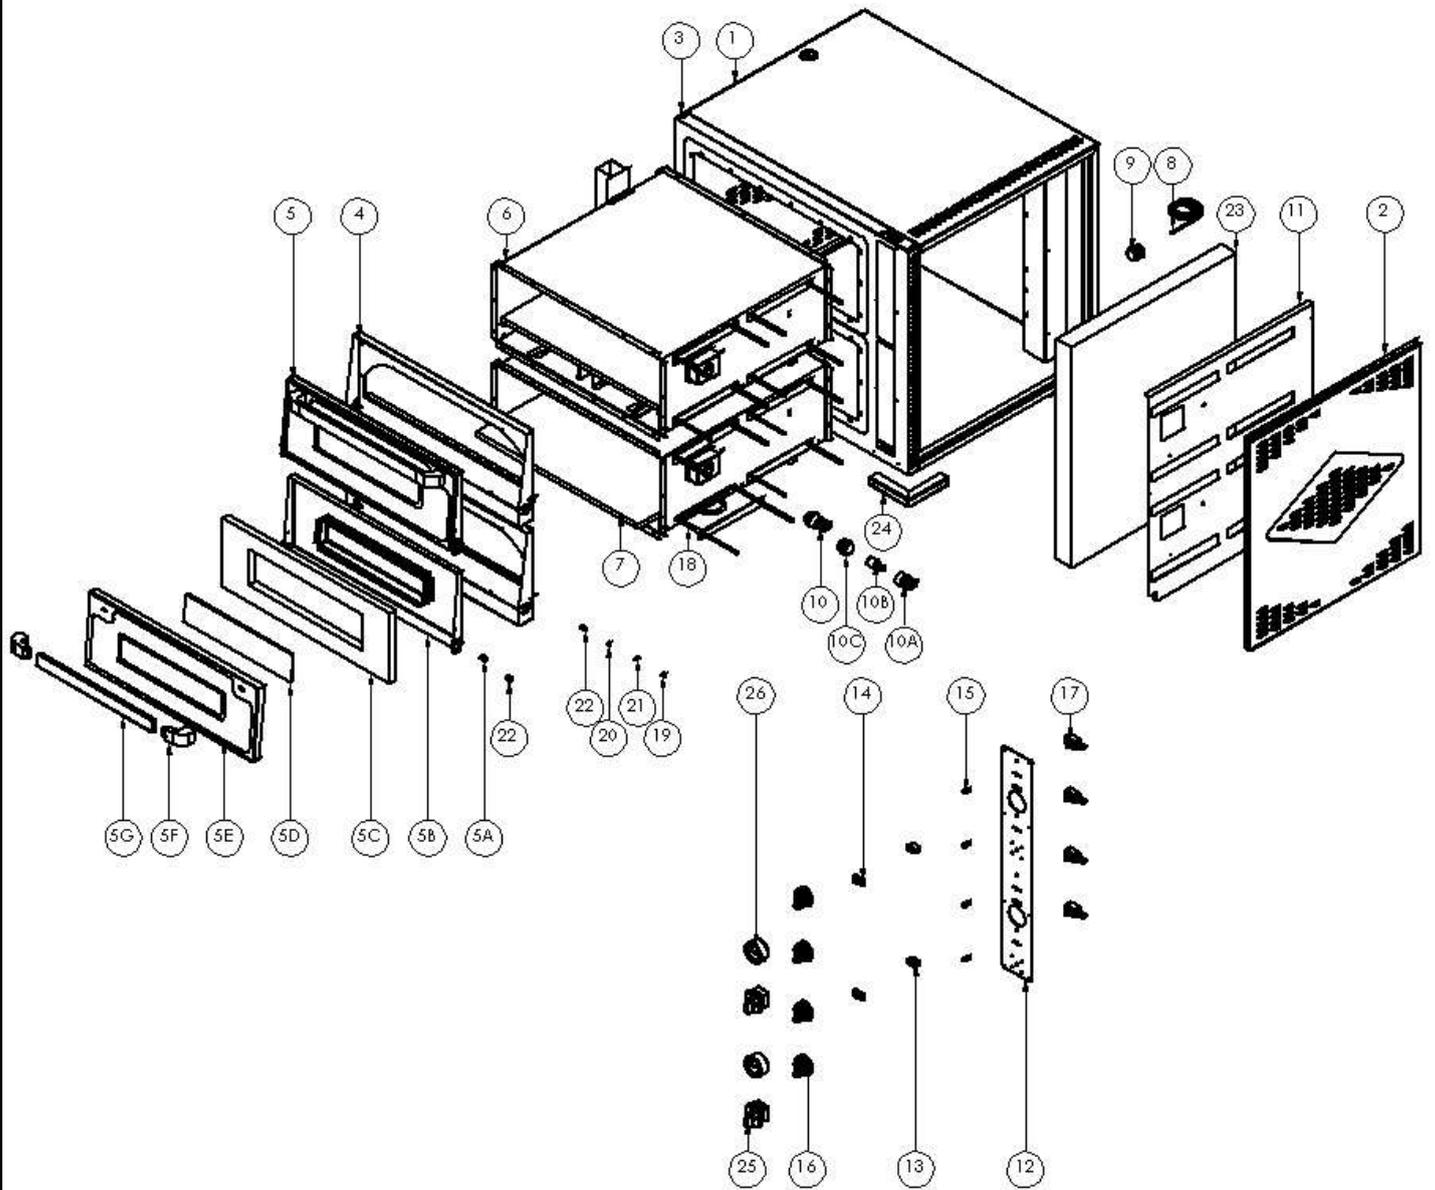

ПЕЧЬ ДЛЯ ПИЦЦЫ TATRA TPO 44 M

1	MAIN BODY	PF7070DE-01	1
2	SIDE COVER	PF7070DE-02	2
3	FRONT STAINLESS FRAME	PF7070DE-03	1
4	ENAMEL FRAME	PF7070DE-04	2
5	OVEN FRONT COVER	PF7070DE-05	2
5A	M8 IMBUS PIN BOLT	PF7070DE-05A	4
5B	ENAMEL COVER	PF7070DE-05B	2
5C	COVER ISOLATION	PF7070DE-05C	2
5D	SIGHT GLASS	PF7070DE-05D	2
5E	STAINLESS COVER	PF7070DE-05E	2
5F	BAKELITE	PF7070DE-05F	4
5G	ALUMINUM ARM	PF7070DE-05G	2
6	COOKING BOILER	PF7070DE-06	2
7	COOKING STONE	PF7070DE-07	4
8	FEEDING CABLE	PF7070DE-08	1
9	FEEDING CABLE SOCKET	PF7070DE-09	1
10	INTERIOR LIGHTING LAMP	PF7070DE-10	2
10A	SOCKET	PF7070DE-10A	2
10B	LAMP	PF7070DE-10B	2
10C	LAMP GLASS	PF7070DE-10C	2
11	ELECTRICAL MOUNTING PANEL	PF7070DE-11	1
12	PANEL	PF7070DE-12	1
13	INTERIOR LIGHTING BUTTON	PF7070DE-13	2
14	INTERIOR LIGHTING BUTTON PROTECTION	PF7070DE-14	2
15	THERMOSTAT CONTROL LAMP	PF7070DE-15	4
16	THERMOSTAT BUTTON	PF7070DE-16	4
17	THERMOSTAT	PF7070DE-17	4
18	RESISTANCE	PF7070DE-18	8
19	M6 BLIND NUT	PF7070DE-19	4
20	M6 FLAT WASHER	PF7070DE-20	4
21	M6 SPRING WASHER	PF7070DE-21	4
22	M6 IMBUS PIN BLOT	PF7070DE-22	8
23	INSULATION	PF7070DE-23	1
24	OVEN FOOT	PF7070DE-24	4
25	TWO PHASE INTERRUPTION SWITCH	PF7070DE-25	2
26	THERMOMETER (ONLY WITH PF 7070 DE - T)	PF7070DE-26	2