



- COMPONENT LIST**
- F1 : Fuse
 - K1 : Tank Heater Contactor
 - K2-K2A : Boiler Heater Contactor
 - K3 : Washing Pump Contactor
 - K4 : Rinsing Pump(Opt)Contactor
 - P : Mains Water Solenoid Valve
 - M1 : Washing Pump
 - M2 : Drain Pump
 - M4 : Detergent Pump (Opt.)
 - M5 : Rinse Aid Pump (Opt.)
 - RB1,2,3 : Boiler Resistance
 - RT : Washing Tank Resistance
 - S1 : Door Switch
 - S2 : Tank NTC Prop
 - S3 : Boiler NTC Prop
 - S4 : Water Level
 - S5 : Boiler Limit Thermostat
 - S6 : Tank Limit Thermostat
 - FSR : Phase Supply Control Relay
 - T1 : Washing Pump Thermal
 - T : Thermal Protection