


# ПЕЧЬ ДЛЯ ПИЦЦЫ TATRA TPO 4 M

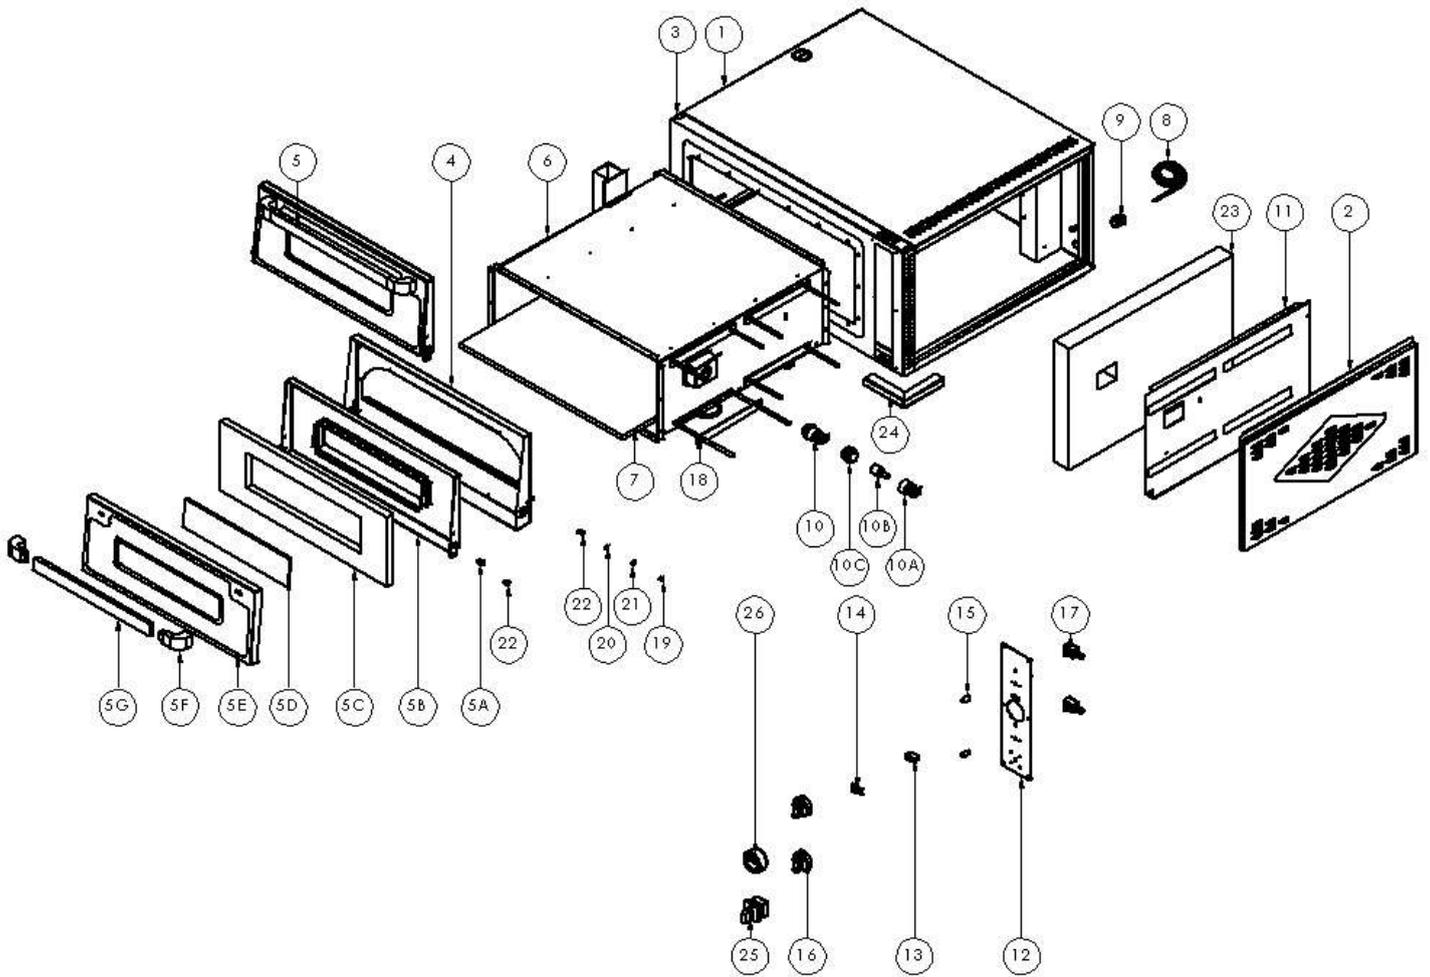

## ПЕЧЬ ДЛЯ ПИЦЦЫ TATRA TPO 4 M

1	MAIN BODY	PF7070E-01	1
2	SIDE COVER	PF7070E-02	2
3	FRONT STAINLESS FRAME	PF7070E-03	1
4	ENAMEL FRAME	PF7070E-04	1
5	OVEN FRONT COVER	PF7070E-05	1
5A	M8 IMBUS PIN BOLT	PF7070E-05A	2
5B	ENAMEL COVER	PF7070E-05B	1
5C	COVER ISOLATION	PF7070E-05C	1
5D	SIGHT GLASS	PF7070E-05D	1
5E	STAINLESS COVER	PF7070E-05E	1
5F	BAKELITE	PF7070E-05F	2
5G	ALUMINUM ARM	PF7070E-05G	1
6	COOKING BOILER	PF7070E-06	1
7	COOKING STONE	PF7070E-07	1
8	FEEDING CABLE	PF7070E-08	1
9	FEEDING CABLE SOCKET	PF7070E-09	1
10	INTERIOR LIGHTING LAMP	PF7070E-10	1
10A	SOCKET	PF7070E-10A	1
10B	LAMP	PF7070E-10B	1
10C	LAMP GLASS	PF7070E-10C	1
11	ELECTRICAL MOUNTING PANEL	PF7070E-11	1
12	PANEL	PF7070E-12	1
13	INTERIOR LIGHTING BUTTON	PF7070E-13	1
14	INTERIOR LIGHTING BUTTON PROTECTION	PF7070E-14	1
15	THERMOSTAT CONTROL LAMP	PF7070E-15	2
16	THERMOSTAT BUTTON	PF7070E-16	2
17	THERMOSTAT	PF7070E-17	2
18	RESISTANCE	PF7070E-18	4
19	M6 BLIND NUT	PF7070E-19	2
20	M6 FLAT WASHER	PF7070E-20	2
21	M6 SPRING WASHER	PF7070E-21	2
22	M6 IMBUS PIN BLOT	PF7070E-22	4
23	INSULATION	PF7070E-23	1
24	OVEN FOOT	PF7070E-24	4
25	TWO PHASE INTERRUPTION SWITCH	PF7070E-25	1
26	THERMOMETER ( ONLY WITH PF 7070 E - T )	PF7070E-26	1