


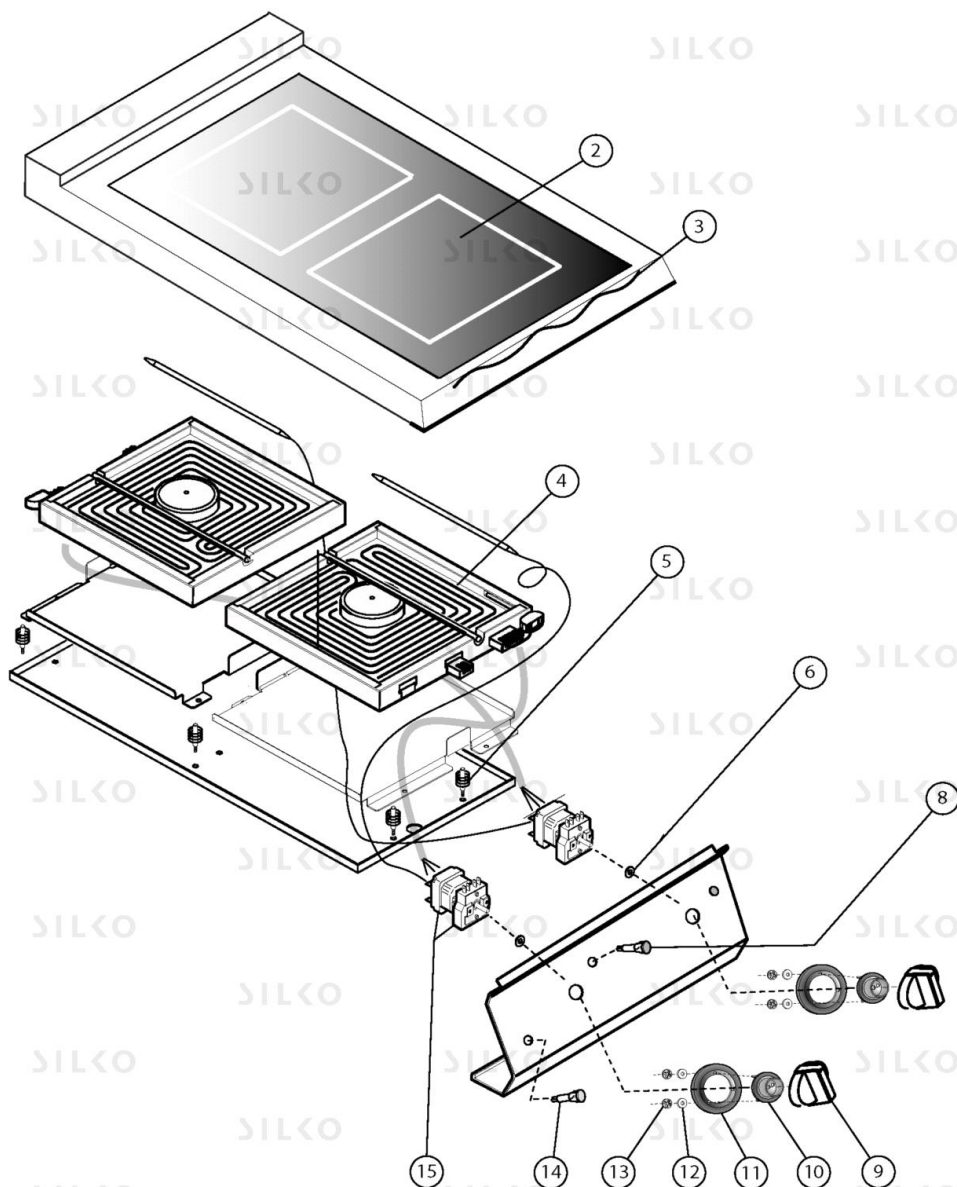

CERAMIC PLATE COOKING TOP

Pos	Code	Description
0002	CR0688610	GLASS CERAMIC PLATE [C]
0003	CR0411400	SILICONE [C]
0004	CR0688660	SQUARED ELECTRIC PLATE [C] 4KW 300X300
0004	CR0735670	ELECTRIC PLATE [C] 3,5KW 300X300 SQUARED
0005	MACM294000	SPRING [C] RADIANT ELEMENT
0006	CR0587650	GASKET [C] SHAFT
0008	CR0682520	RED PILOT LAMP [C]
0009	CR1095040	KNOB [C] SHAFT E15 D. 6
0010	CR0581190	BUSH [C]
0011	CR1095170	METAL LABEL [C] E15
0012	CR0588510	GASKET [C] CONTROL PANEL 900
0013	CR0588950	EXTENSION [C] DRAIN PASTA COOKER 900
0014	CR0587500	ORANGE PILOT LAMP [C]
0015	CR0688650	THERMOSTAT [C]