


Instruction Manual for Wine Cabinet

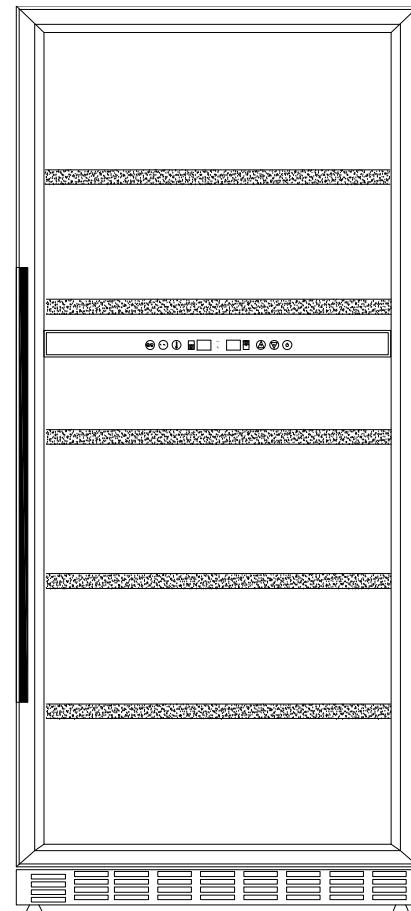

2. Unplug the socket and contact your dealer if the compressor still not starts.

8.2 Dew on the surface of cabinet

The surface of wine cabinet especially the glass door will appear some frost if the cabinet is installed in a damp room. This is due to the moisture in the air coming into contact with the cabinet. Please wipe it away with dry cloth.

8.3 Liquid sound

1. The sound of compressor when starts or stops working.
3. The rattling noise may come from the flow of the refrigerant, which is normal.
4. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your wine cabinet.

8.4 Condensation formed inside the cabinet

If the wine cabinet is in the environment with high level of humidity or the door of your cabinet has been left open for a long period or opened frequently, wipe off the door and the cabinet walls and leave the door closed as long as possible.

Foreword


This Instruction Manual is the universal-purpose version for the models of wine cabinet manufactured by our company. The appearance of the units that you purchase might be slightly different from the Manual, but it does not affect your proper operations and usage.

Please read carefully the sections corresponding to the specific model you choose, and keep the manual properly so as to facilitate your reference at later time.

Contents

1- Construction of wine cabinet-----	4
2- Important safety instructions-----	5
3- Power supply connection-----	6
4- Wine cabinet installation-----	6
5- Temperature setting-----	7
6- Layout and storage-----	10
7- Routine maintenance-----	13
8- Operating problems-----	14

1. Construction of Wine Cabinet

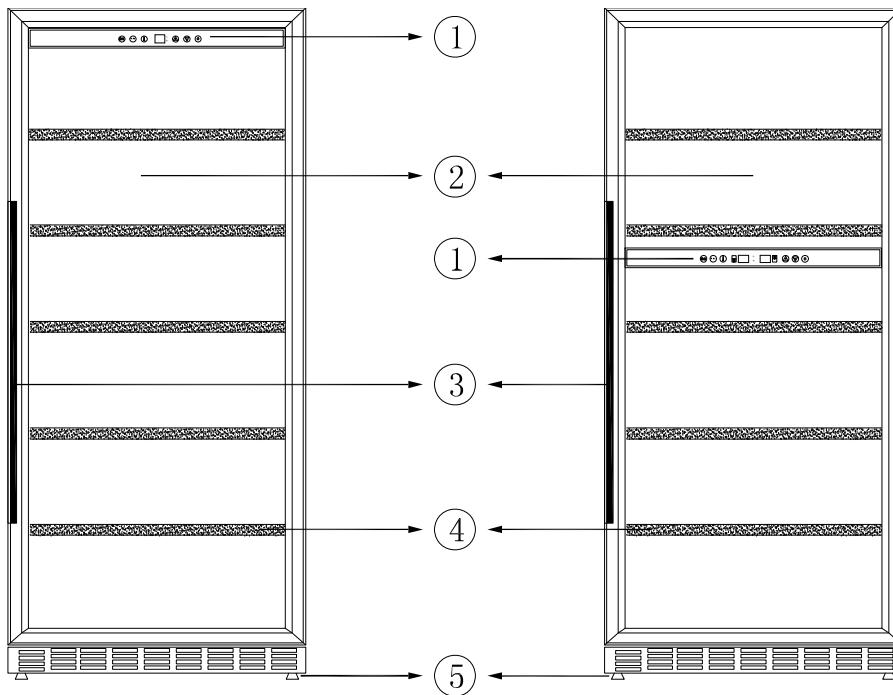

- (1) Control Panel and Temperature Setting
- (2) Glass Door
- (3) Door Handle
- (4) Storage Shelf
- (5) Adjustable Feet

touch the back of the cabinet, or the step at bottom.

B. Make sure that bottles are not all grouped together at the top or bottom of the cabinet.

C. Observe the loading instruction provided in section 6, according to the type of storage of storage shelf with which your cabinet is equipped, and never stack bottles on a sliding shelf.

7. Routine Maintenance

Your cabinet is easy to operate and has proven its reliability; it will provide long-lasting satisfaction if you follow the simple maintenance and cleaning operations listed below:

- Replace the activated charcoal filter in the upper ventilation hole of the cabinet half a year (Your dealer keeps this accessory in stock).
- Remove the dust from the condenser (metal screen on the back of the cabinet) twice a year.
- Make sure the power cord is unplugged before cleaning the back of your cabinet or before moving it.
- Clean the inside of your cabinet thoroughly once a year, after unplugging and unloading it (use water and a mild cleaning product, then rinse carefully).


To assure that your wine cabinet provides long-lasting service, you should check it regularly and inform your dealer if you note anything unusual.

8. Operating Problems


8.1 Start-Up:

Compressor does not start even though the desired temperature is lower than the temperature in the room, do the following steps:

1. Check the wall socket by plugging in any type of electrical device, and make sure that the ON/OFF button is pressed.

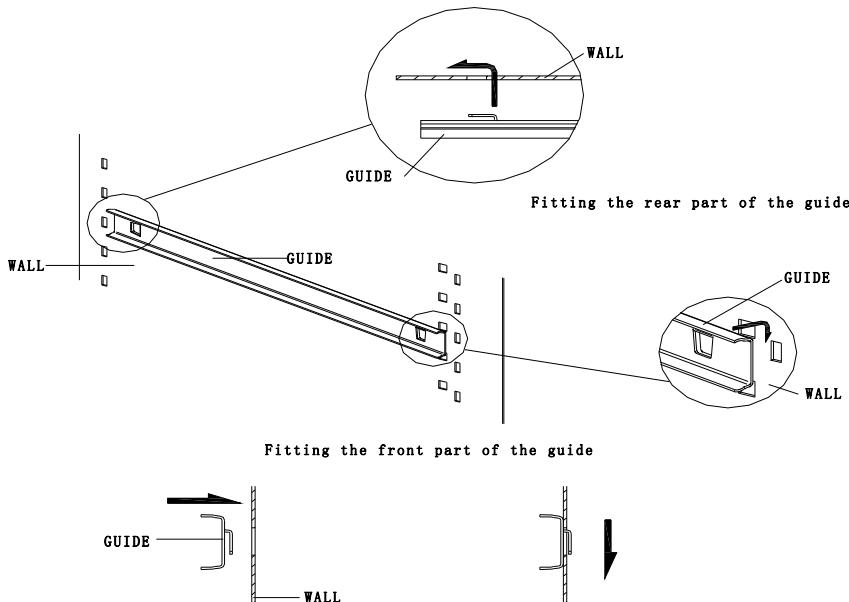

Refit the sliding shelf as shown below:

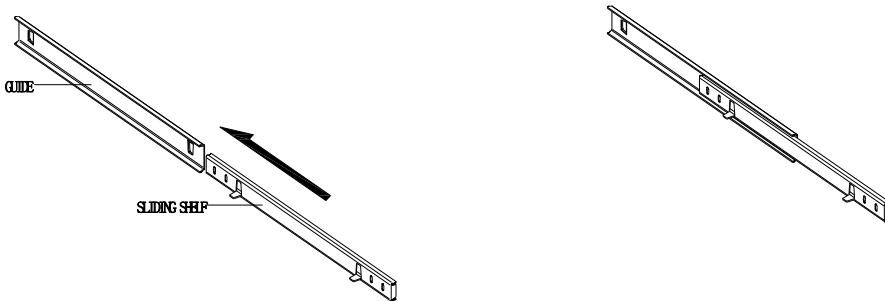

6.3 Your cabinet was designed to store a maximum number of bottles in total security, we recommend that you observe the tips below to optimize loading:

A. Spread your bottles out as evenly as possible over the shelves, so that weight is not concentrated in one point; also make sure your bottles do not

2. Important Safety Instruction

You must always observe basic precautions when using the wine cabinet, including:

1. Only use your wine cabinet for intended purposes, as described in this guide.
2. Never unplug the wine cabinet by pulling out the power cord, grip the plug firmly and pull straight out to remove from wall socket.
3. Immediately repair or replace any worn or damaged cord, never use a cord that is split or which shows signs of wear along its length or on its ends.
4. Do not allow children to climb on, sit on or stand on the wine cabinet, nor hang from its shelves. They could damage the cabinet.
5. Do not use an extension cord.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.
8. **Warning:** Before you throw away your used refrigerator or freezer:
 - A. Take off the doors
 - B. Leave the shelves in place so that children may not easily climb inside.
9. **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
10. **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

manufacturer.


11. WARNING: Do not damage the refrigerant circuit.
12. WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended

3. Power Supply Connection

1. This wine cabinet requires a standard 220-240VAC, 50/60HZ electrical outlet.
2. Standard socket with earth connection (12~16A, 250V~)
3. The appliance should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating label on the appliance. This provides the best performance and also prevent overloading house wiring circuit that could cause a fire hazard from overheated. Never unplug the appliance by pulling the power the power cord. Always grip the plug firmly and pull straight out from the receptacle. Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end. When moving the appliance, be careful not to damage the power cord.

4. Wine Cabinet Installation:

1. Make sure when you unpack it there is no defect in its external appearance when you receive the wine cabinet.
2. Open the door and check to see that the inside is complete(walls, shelves, hinges, control panel, etc.)
3. Move your wine cabinet to the final place if there is no problem with it after checking. Observe the following when placed:
 - A. Allow at least 5 cm between the back and sides of the wine cooler; and leave a minimum space of 8cm between the back cabinet and the wall.
 - B. Place your wine cabinet on a floor that is strong enough to support the wine cabinet when it is fully loaded. Adjust the four underneath the

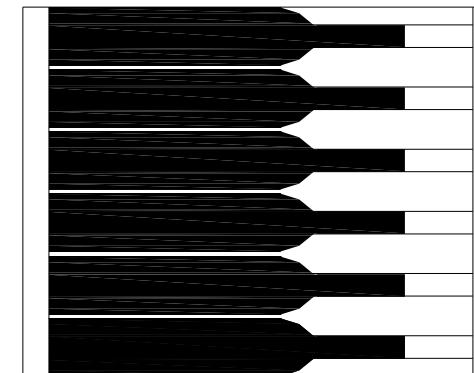

No more than 6 bottle of wine every shelf

Maintain a minimum 20mm between bottle and back plate

6.2 Read the following carefully if change the position of shelf:

To move a sliding shelf, first remove all bottles, then move the sliding shelf by sliding guides from walls, while making sure not to mix up the right and left guides.

Installation diagram of sliding shelf:


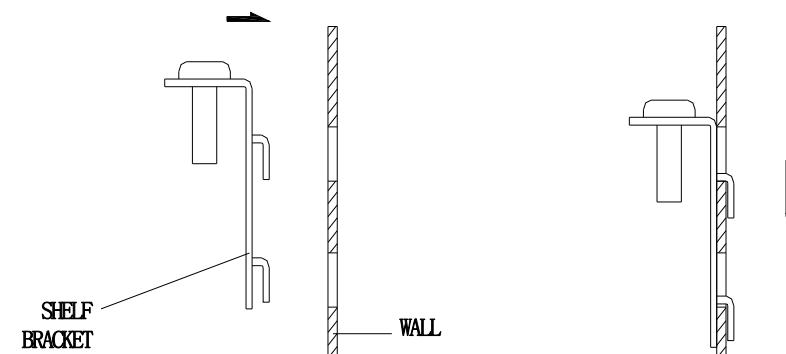


Diagram of fixed and sliding shelf:

6. Layout and Storage of Wine

6.1 Different types of layout

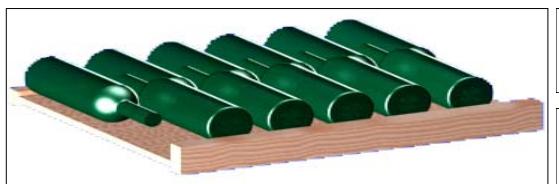


cabinet so that your cabinet is level..

4. Locate the wine cooler away from direct sunlight and sources of heat and high humidity areas, such as laundry room and bathroom, etc.
5. Do not tilt the cabinet at an angle of more than 45° when moving it. Allow a minimum 10 minutes' interval between transit and re-starting.
6. Make sure the ventilation is free if you wish to install your cabinet into a workable, otherwise, it will reduce the effect of usage.

5. Temperature Setting

5.1 The temperature setting of dual temperature wine cabinet

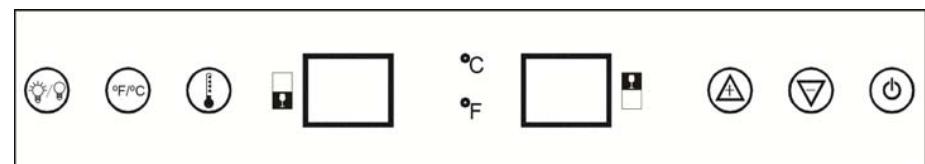

ON/OFF Power

To turn OFF the appliance, press the  button and hold 2 seconds.

Setting the temperature control

You can select temperature display setting from Fahrenheit to Celsius degree by touching the  button. Fahrenheit or Celsius degrees indicator will appear in blue color in the temperature display window.

The temperature range of lower zone is 12°-18°C which is suitable for storing white and red wines. The temperature range of upper zone is 5°-12°C which is suitable for storing sparkling and white wines.

If you desire to change the temperature, set the temperature as you desire by touching the  or  button. Touch the  button once to select

the lower zone and once more to select the upper zone. The numbers in the display window will flash. The temperature that you desire to set will increase 1°F or 1°C if you touch the  button once; on the contrary the temperature will decrease 1°F or 1°C if you touch the  button once.

When you store mostly red wines, the temperature which you control by touching the above two buttons need to be set at 15°C-18°C (59°F-65°F).

When you store mostly white wines, the temperature needs to be set at 9°C-14°C (48°F-57°F) When you store mostly sparkling wines, the temperature needs to be set at 5°C-8°C (40°F-47°F) The temperature inside the unit will be appeared in blue color in the display window.

5.2. The temperature setting of single temperature wine cabinet

【Direct-cooling wine cabinet】



ON/OFF Power

To turn OFF the appliance, press the  button and hold 2 seconds.

Setting the temperature control

You can select temperature display setting from Fahrenheit to Celsius degree by touching the  button. Fahrenheit or Celsius degrees indicator will appear in blue color in the temperature display window.

If you desire to change the temperature, set the temperature as you desire by touching the  or  button. First press the  button. The numbers in the display window will flash. The temperature that you desire to set will increase 1°F or 1°C if you touch the  button once; on the contrary the temperature will decrease 1°F or 1°C if you touch the  button once.

When you store mostly red wines, the temperature which you control by touching the above two buttons need to be set at 15°C-18°C (59°F-65°F).

When you store mostly white wines, the temperature needs to be set at 9°C-14°C (48°F-57°F) When you store mostly sparkling wines, the temperature needs to be set at 5°C-8°C (40°F-47°F) The temperature inside the unit will be appeared in blue color in the display window.

NOTE: If the unit is unplugged, if the power is lost, or turned off, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the wine cellar will not start.

When you use the wine cellar for the first time or restart the wine cellar after having been shut off for a long time, there could be a few degrees variance between the temperature you select and the one indicated on the LED readout. This is normal and it is due to the length of the activation time. Once the wine cellar is running for a few hours everything will be back to normal.