



# GT106: exploded view – external parts

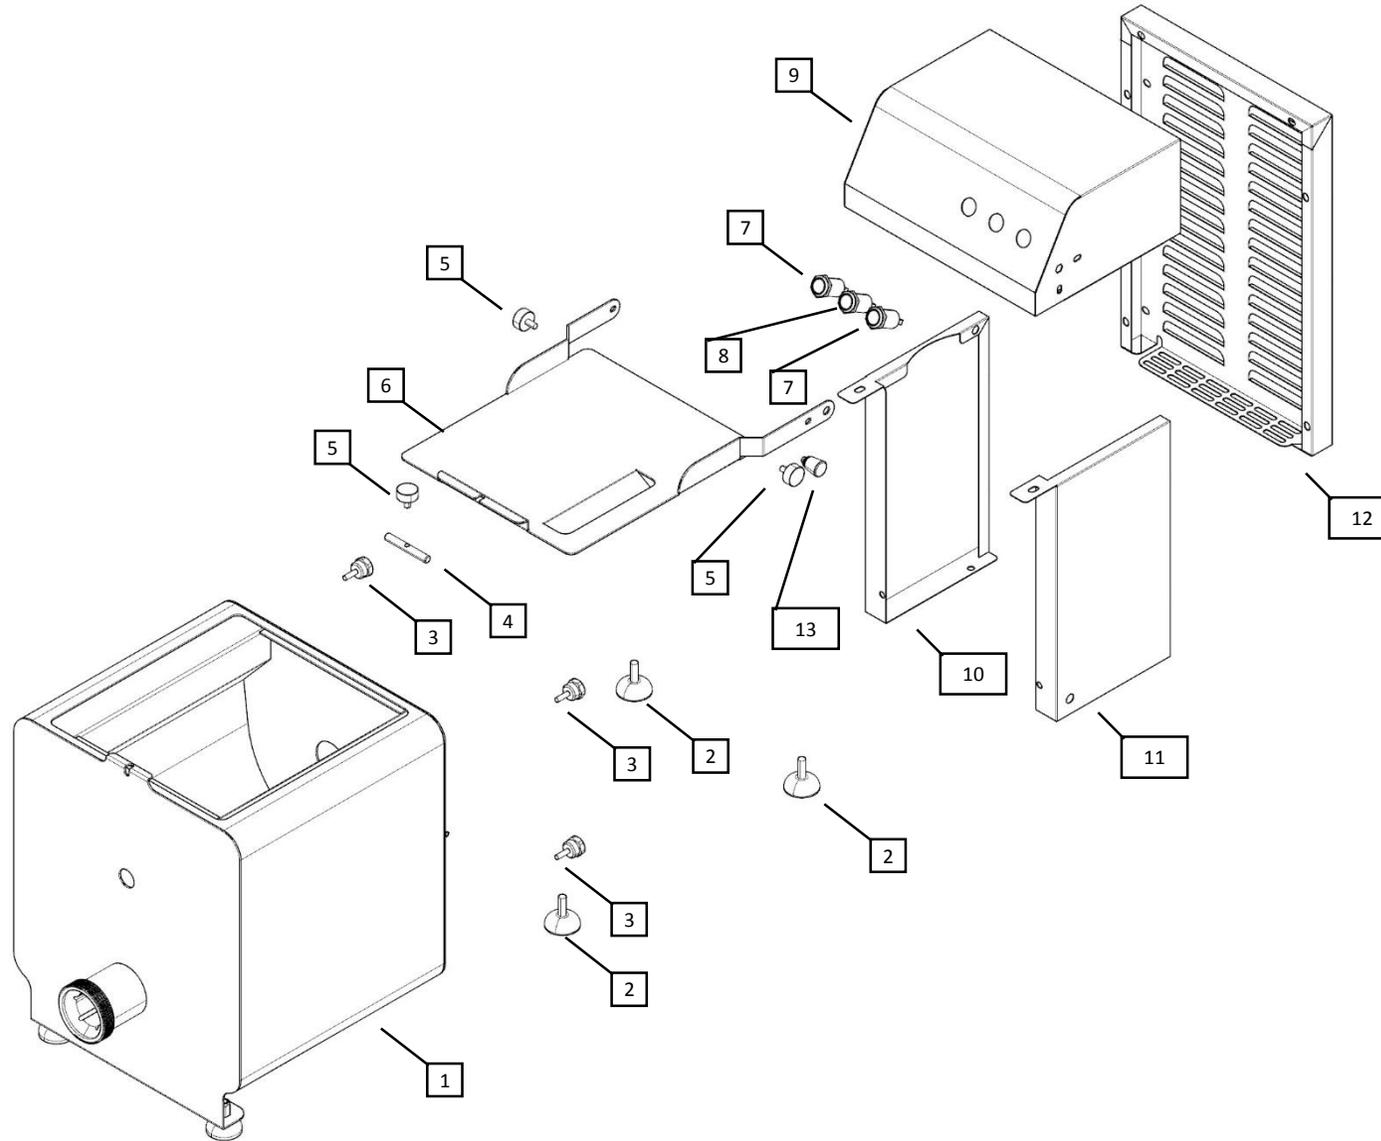


SYMBOL	CODE	DESCRIPTION
1	LVA10002	Tank GT106
2	PDGE0001	Foot of pin D 40mm M8; polyamide H 13mm
3	TRM10001	tank fixing screw
4	TRT10001	locking rod tank cover
5	TRM10002	cover fixing knob
6	LCP10002	Tank cover GT106
7	CEPU0002	Switch vandal resistant IP67 blu light
8	CEPU0001	Switch vandal resistant IP67 red light
9	LCR10001	dashboard controls
10	LCA10001	Left carter GT104
11	LCA10002	Right carter GT104
12	LSC10001	Rear casing GT104
13	CEMC0002	Spring loader plunger

# GT106: exploded view – internal parts

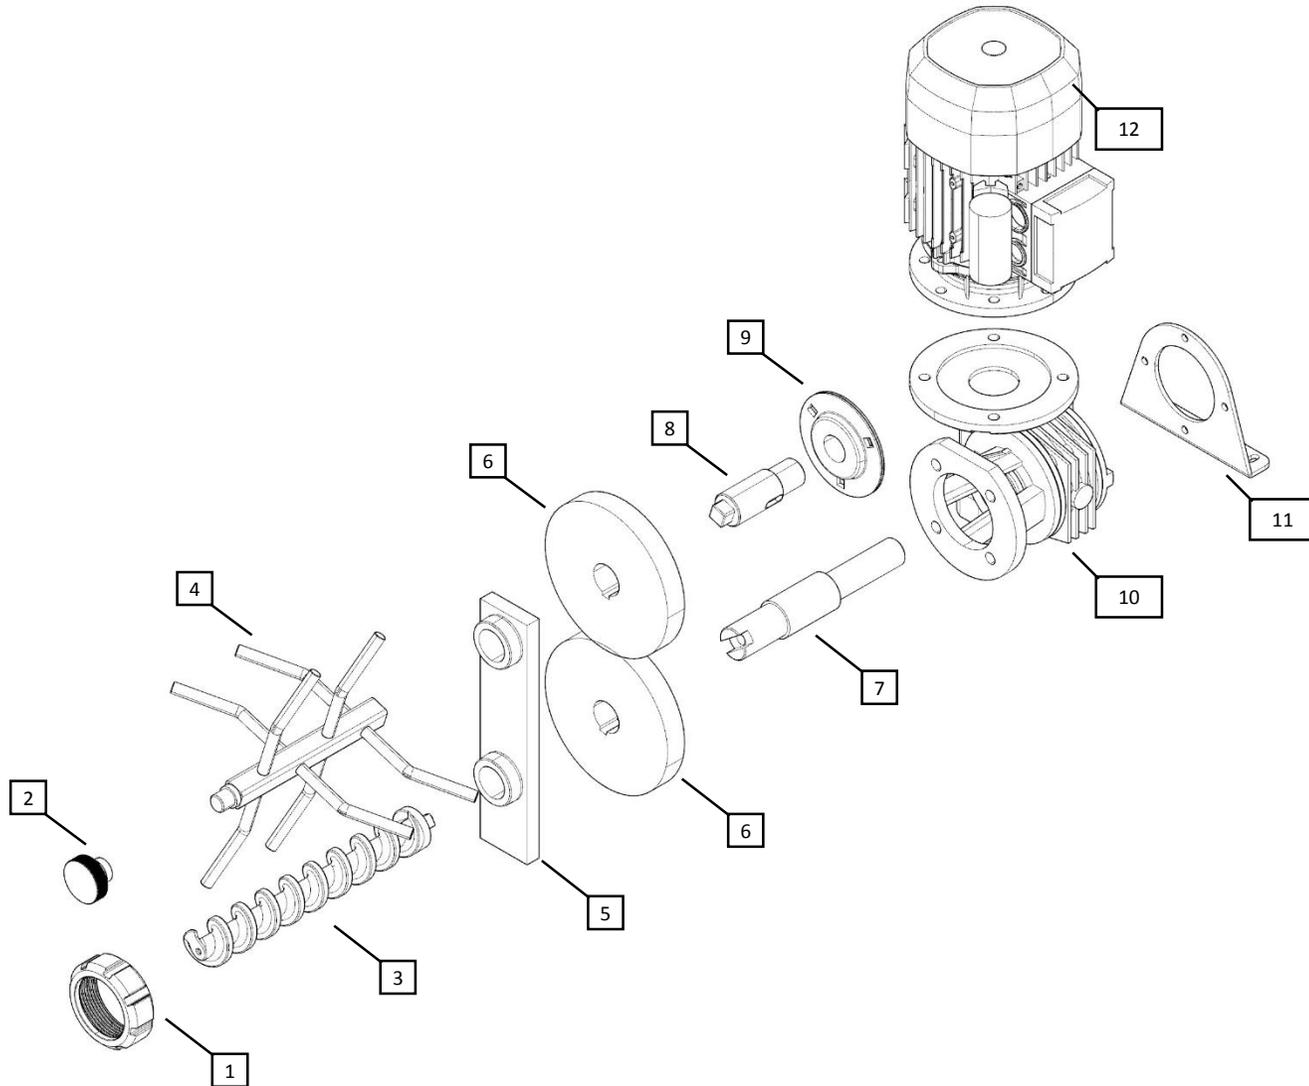


SYMBOL	CODE	DESCRIPTION
1	TRG20001	Die locking ring
2	TRB20001	Mixer centering ring
3	TRC20002	Spiral body GT106
4	LRO30002	Mixer element GT106
5	TRB30001	Pinion centering bush
6	TRR40001	Cylindrical gear wheel M2 Z70 Dp 140mm
7	TRA10002	Gearmotor shaft
8	TRA10001	Mixer shaft
9	CUAA0001	Mixer shaft bearing
10	RIAA0001	Gearmotor GT104
11	LFA10001	Gearmotor flange
12	METF0001	THREE-PHASE MOTOR

# GT106: power supply wiring diagram

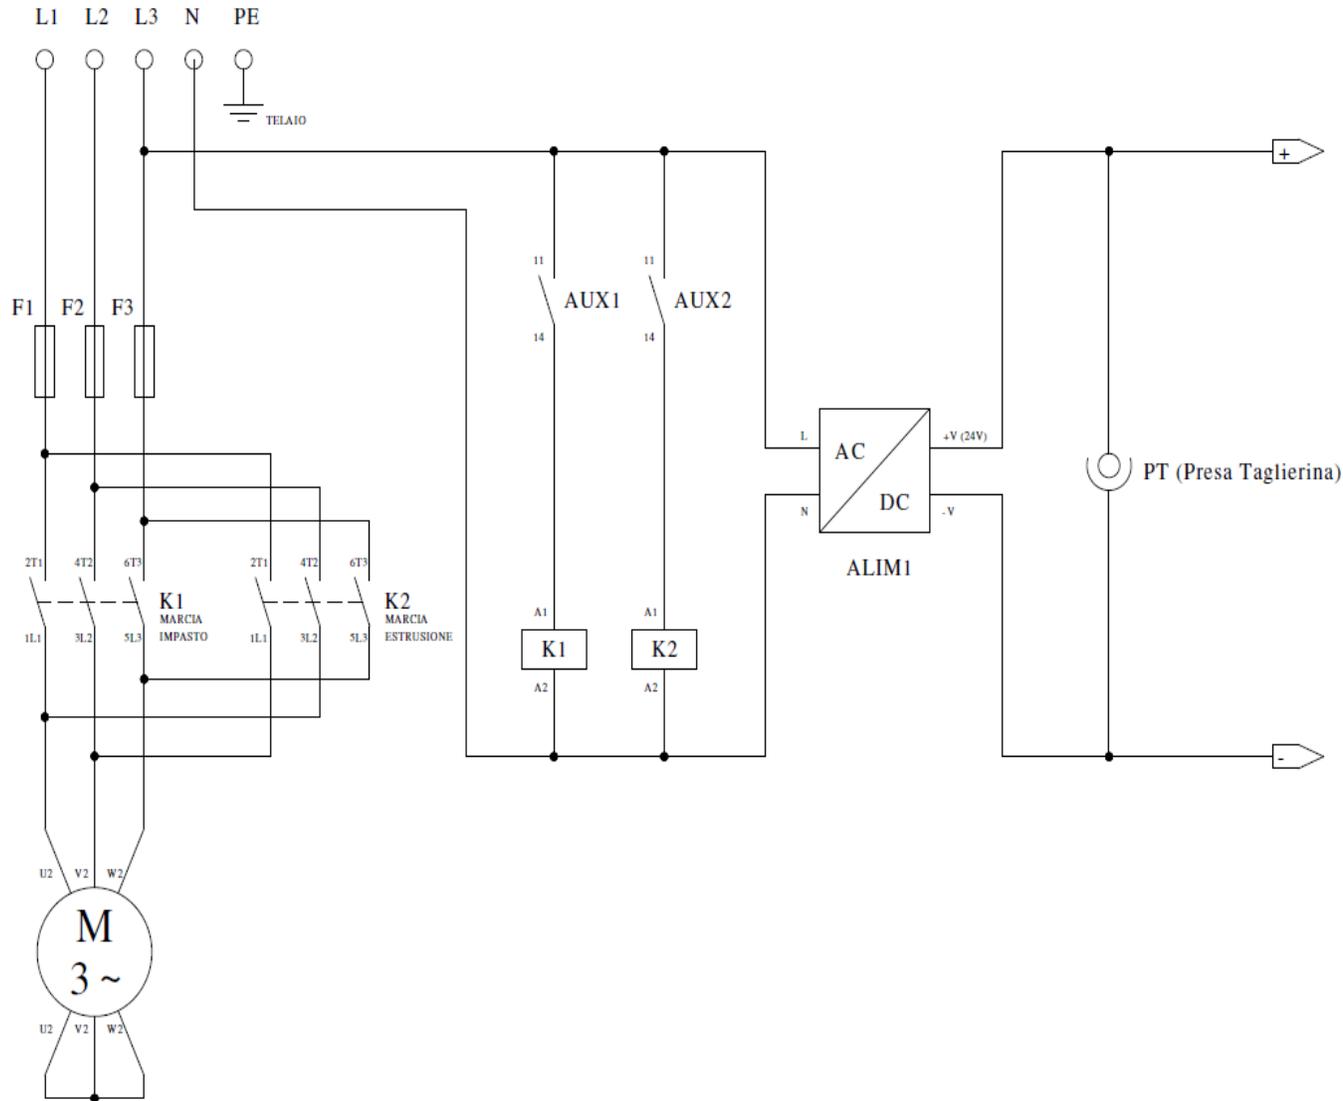

SYMBOL	CODE	DESCRIPTION
F1 – F2 – F3	<b>CEFU0001</b>	Fuse time-lag 10A 250VAC 6,3x32mm
	<b>CEFU0002</b>	Fuse holder 6,3x32mm 10A 250V
AUX1 – AUX2	<b>CERL0001</b>	Relay electromagnetic DPDT Ucoil: 24VDC 8A/250VAC 8A/30VDC
K1 – K2	<b>CETL0001</b>	Contactore MINICONT.3P4KW 1NC
PT	<b>CECN0001</b>	Socket DC supply male 5,5mm/2,5mm
ALIM1	<b>CEAL0001</b>	Power supply switched-mode modular 15W 24VDC
M1	<b>MEMN0001</b>	SINGLE-PHASE MOTOR

# GT106: control panel wiring diagram

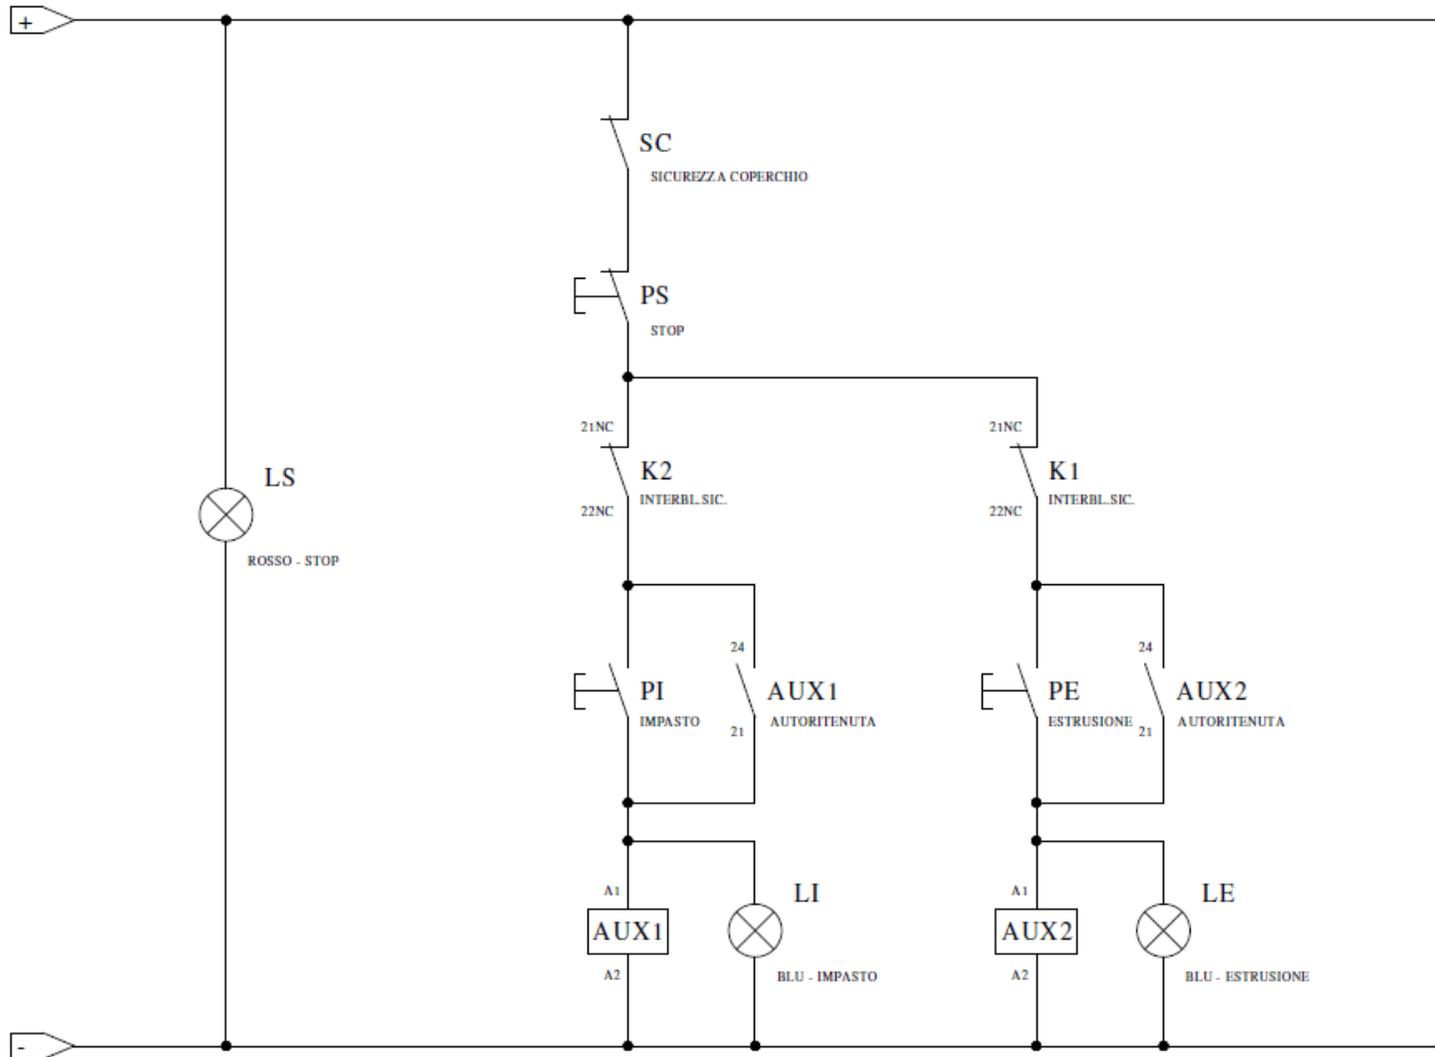

SYMBOL	CODE	DESCRIPTION
LS/PS	CEPU0001	Switch vandal resistant IP67 red light
LI/PI	CEPU0002	Switch vandal resistant IP67 blu light
LE/PE	CEPU0002	Switch vandal resistant IP67 blu light
SC	CEMC0001	Security microswitch