

KitchenAid®

MIXER

MODELS:


5KSM70JPXECU0 (Contour Silver)

5KSM70JPXEER0 (Empire Red)

5KSM70JPXE0B0 (Onyx Black)

5KSM70JPXEWH0 (White)


COLOR VARIATION PARTS

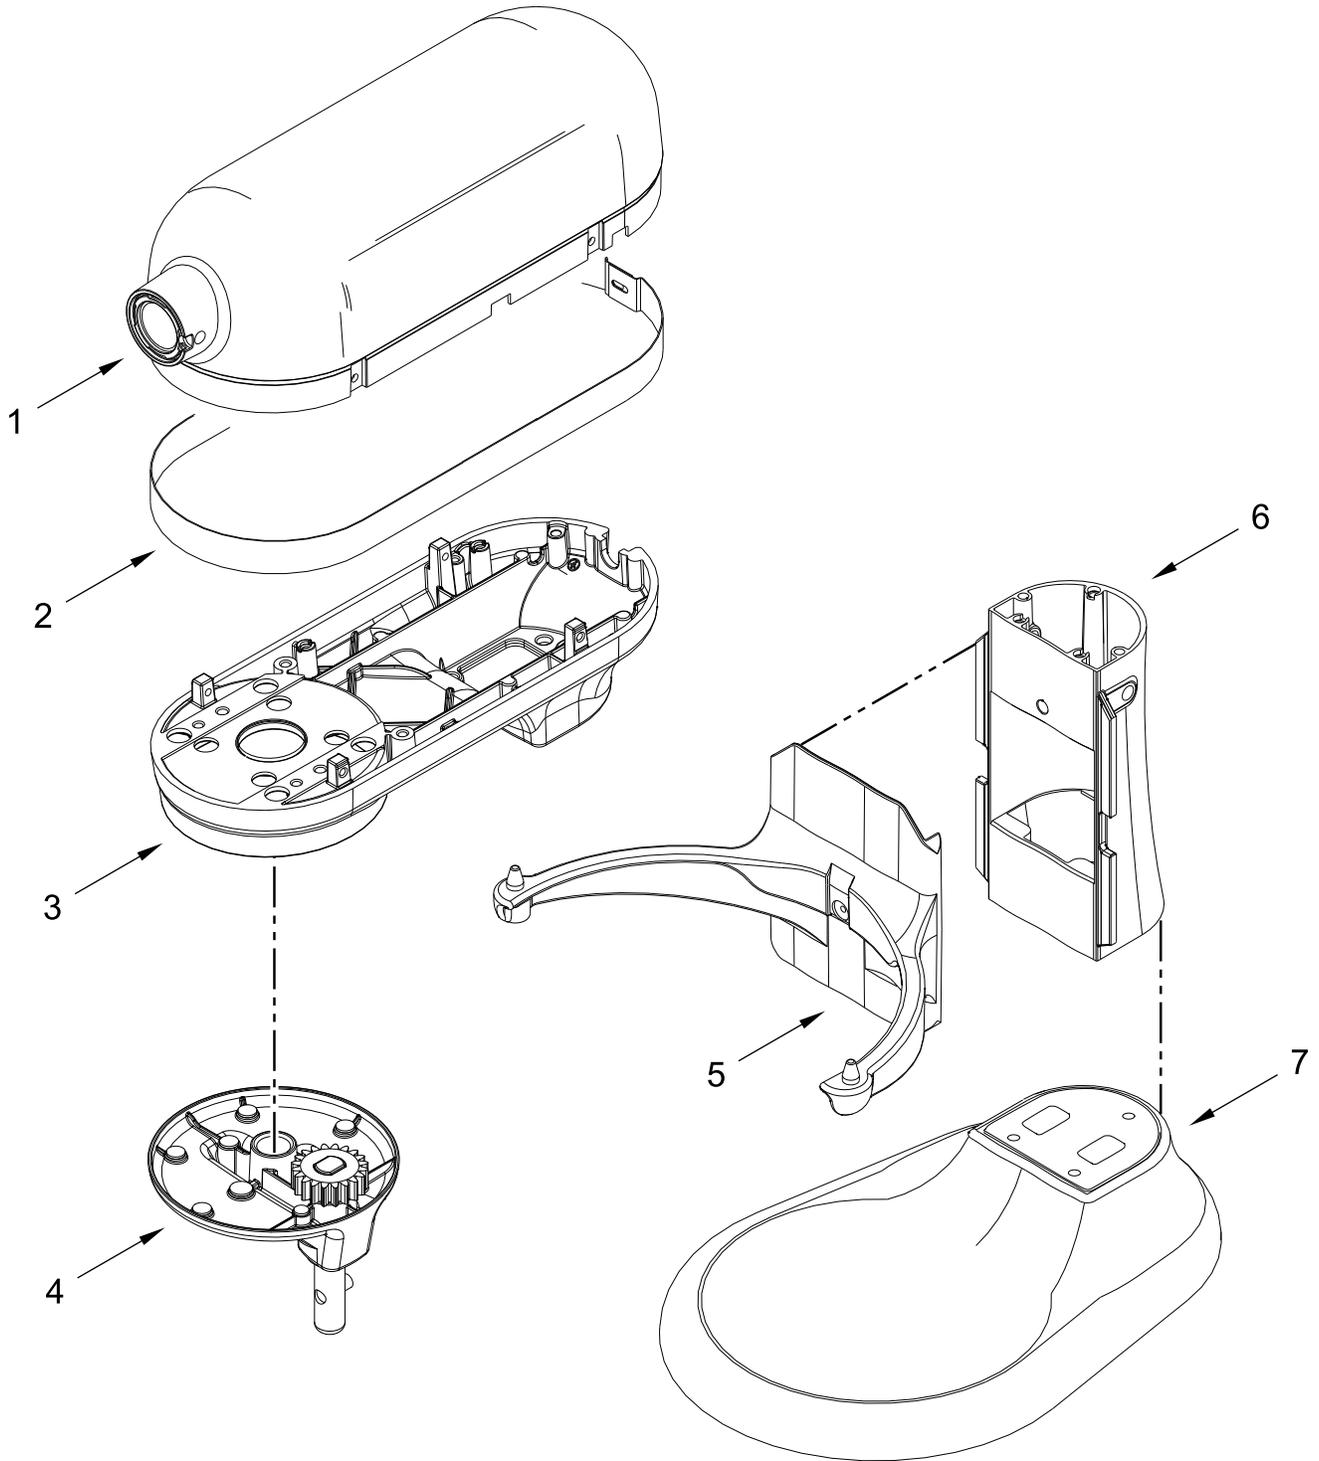

COLOR VARIATION PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Motor Housing	4		Planetary	7		Base and Foot Assembly
	W10327951	Contour Silver		W11595416	Silent Silver			
	9705300	Empire Red	5		Bowl Support and Pins	W10328017		Contour Silver
	9705296	Onyx Black		W10327966	Contour Silver	9705348		Empire Red
	9703311	White		9705360	Empire Red	9705344		Onyx Black
2		Trim Band		9705356	Onyx Black	9703690		White
	W11420348	Light Brushed Aluminum		9703674	White			
3		Lower Gearcase	6		Column and Pins			
	W11520143	Contour Silver	W10328003		Contour Silver			
	W11520142	Empire Red	9705324		Empire Red			
	W11421149	Onyx Black	9705320		Onyx Black			
	W11520144	White	9703673		White			


CASE, GEARING AND PLANETARY UNIT

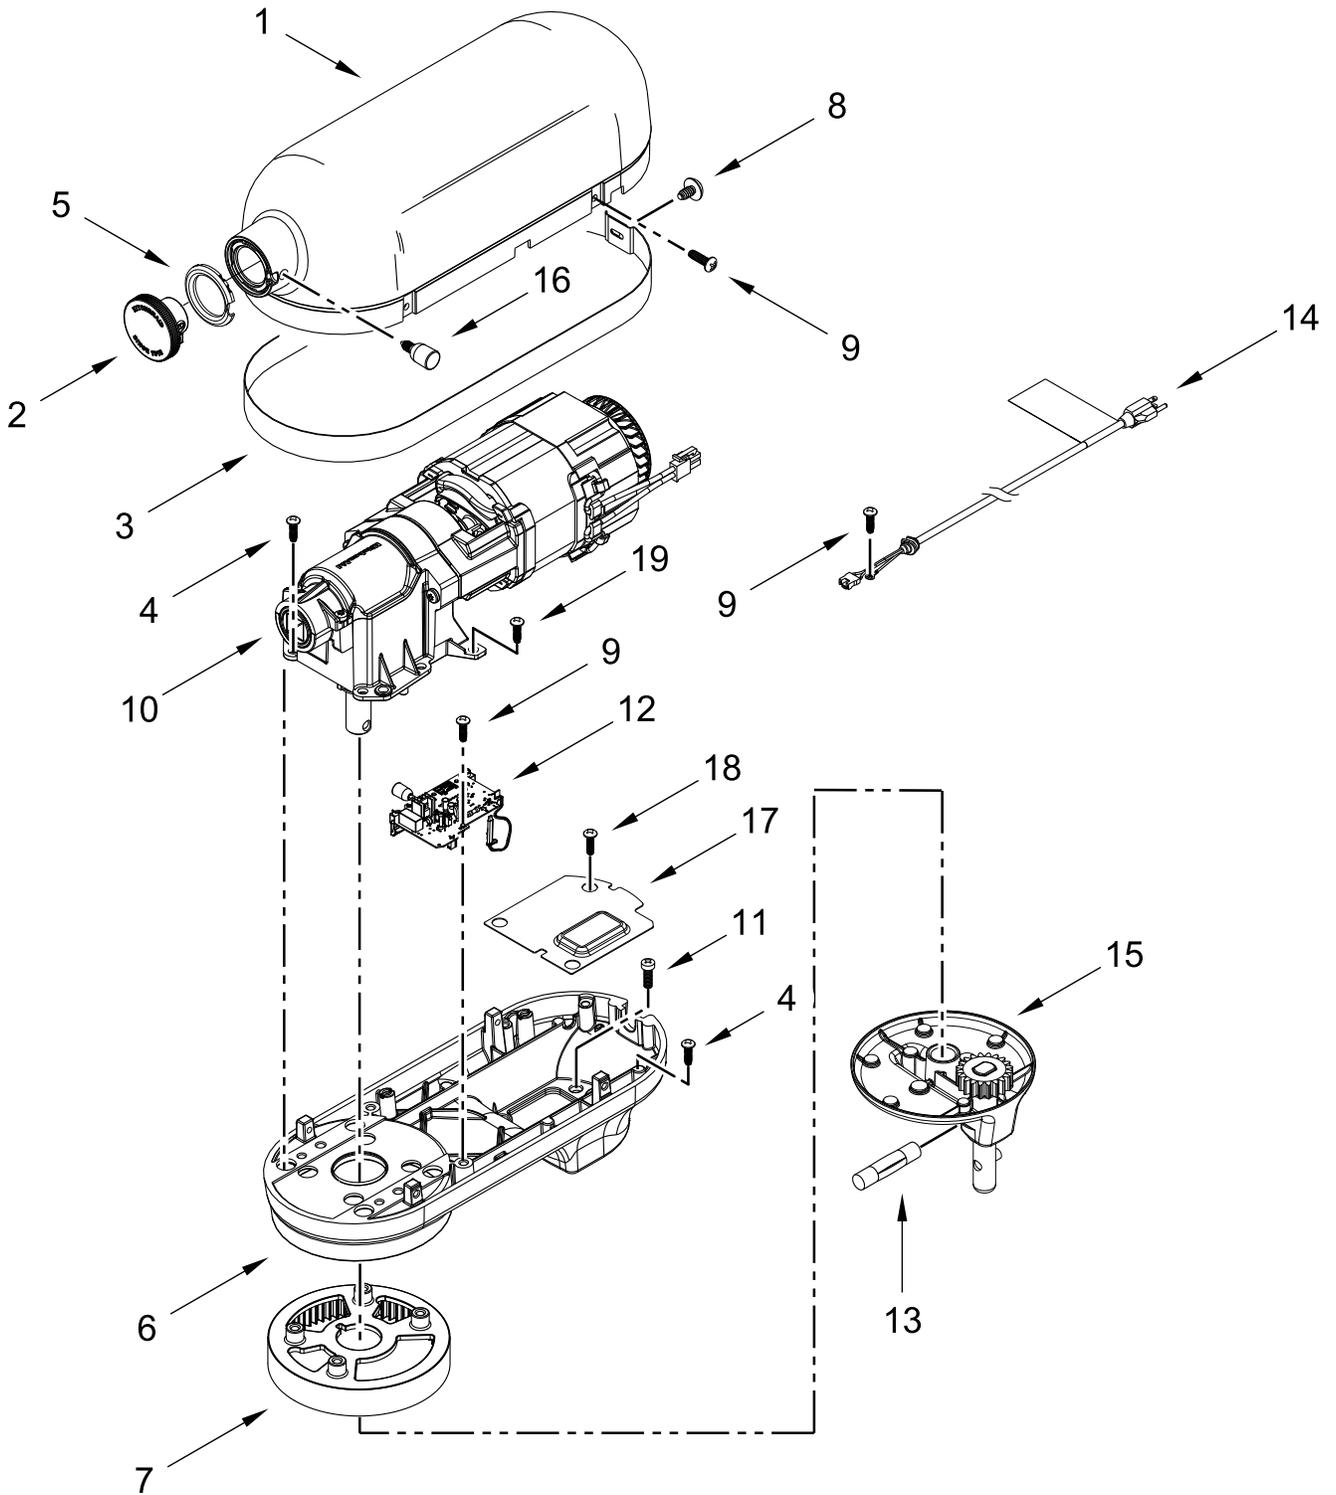

CASE, GEARING AND PLANETARY UNIT

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Gearcase Motor Housing (Refer to Color Variation Parts Page)	6		Lower Gearcase (Refer to Color Variation Parts Page)	13	W10234531	Pin, Groove
2	W11591898	Cover, Attachment Hub - Dual Finish	7	W11454895	Gear, Ring and Plate Assembly	14		Cord, Power
3		Band, Trim (Refer to Color Variation Parts Page)	8	3400617	Screw	15	W11459270	Black Planetary Assembly (Refer to Color Variation Parts Page)
4	W10351843	Screw	9	3400814	Screw	16		Thumb Screw
5	9706141	Ring, Attachment Hub	10	W11480076	Motor, 230 Volt Assembly	17	W11521863	Chrome
			11	3400200	Screw	18	W11560130	Plate, Lower Housing
			12	W11512563	Control, 230 Volt	19	W10419037	Screw
							W11457471	Screw

BASE AND PEDESTAL UNIT

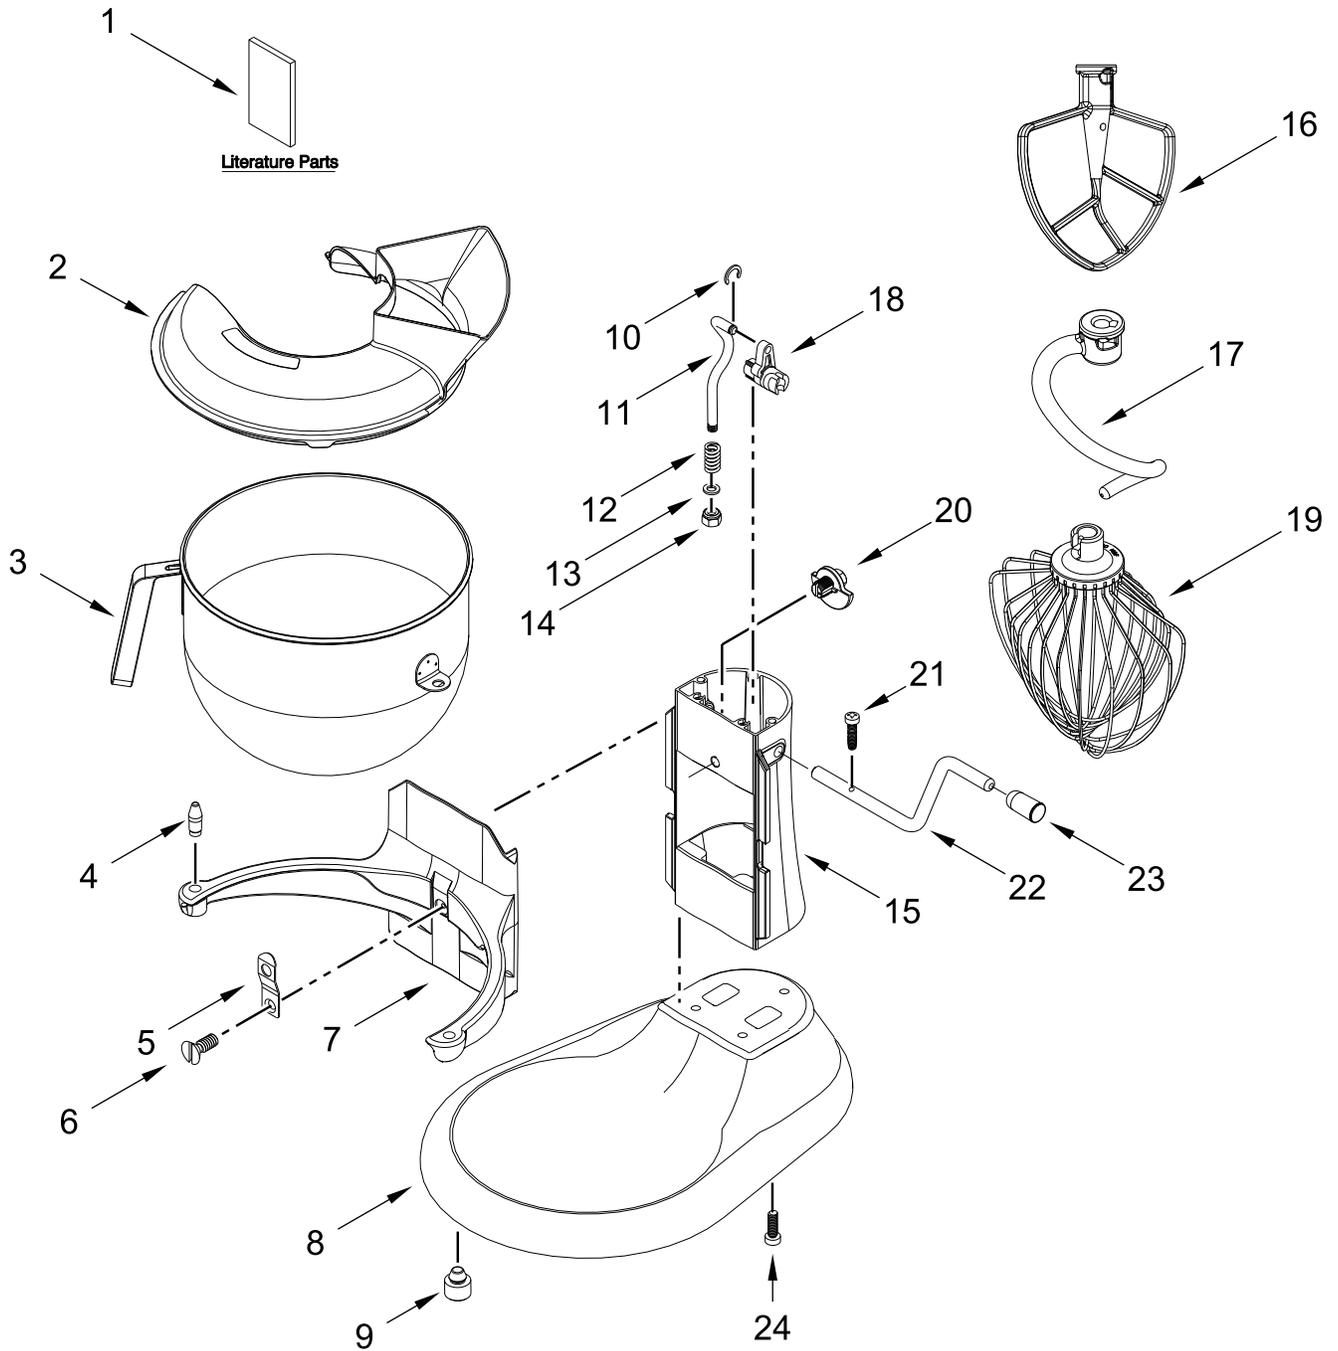

BASE AND PEDESTAL UNIT

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	9708649	Foot	20	9703426	Cam, Adjusting
	W11616370	Use and Care Guide	10	9703307	Ring, Retaining	21	3400863	Screw
2	W11385624	Shield, Pouring (Wide)	11	W11376364	Rod, Bowl Lift	22	W11376371	Handle, Bowl Lift
3	W11535332	Bowl, 7 Qt.	12	9237	Spring, Lift Rod	23	W11627641	Cap, Handle
4	240185	Pin, Retaining Bowl	13	9703439	Washer	24	3400200	Screw
5	W10504114	Clip, Bowl Retainer	14	8533907	Nut			
6	3400018	Screw	15		Column Assembly (Refer to Color Variation Parts Page)			
7		Bowl Support (Refer to Color Variation Parts Page)	16	W11571991	Beater, Flat (Silent Silver)			
8		Base and Foot Assembly (Refer to Color Variation Parts Page)	17	W11571994	Hook, Dough (Silent Silver)			
			18	9706885	Arm, Bowl Lift			
			19	W10600940	Whip, Wire			